




RoHS FC CE (EMC, R&TTE)
ISO9001:2008

M series LED Receivers are compatible with 7 remotes of different functions (patent technology). M Series RF remotes have Single color dimming, CT dimming, RGB/RGBW, speed and brightness adjustment.

1. Parameter:

Remote(DIM):		CV Receiver (DIM):	
Model:	M1	Model:	M4-5A
Working Voltage:	3Vdc (battery CR2032)	Input Voltage:	5~24Vdc
Working Frequency:	433.92MHz	Current Load:	5A×4CH Max 20A
Remote Distance:	30m	Max Output Power:	(0~25W...120W) × 4CH
Working Temp.:	-30°C~55°C	Protection:	Short circuit / Over-load
Weight(N.W.):	42g	Working Temp.:	-30°C~55°C
		Weight(N.W.):	125g

2. Product Size:

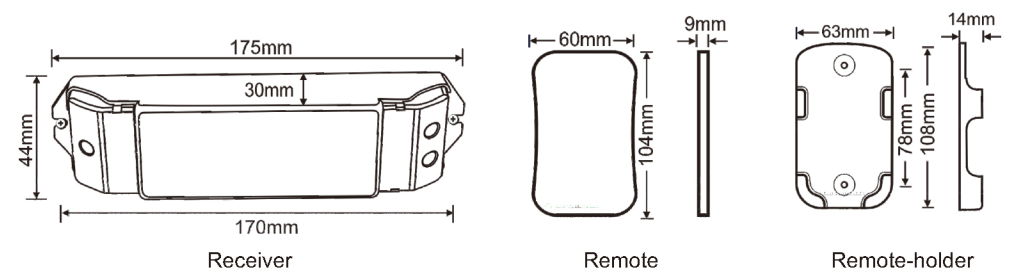

3. The Learning ID Method of Remote Control:

Remote control has been matched to the receiver before leave factory, if deleted accidentally, you can learn ID as follow.

Learning ID: Short press ID learning button on the M4-5A receiver, the running light is on, then press any key on the M1 remote control, the running light flashes several times, activated.

Cancel ID: Long press ID learning button on the M4-5A receiver for 5 seconds.

Attn: one receiver can be matched with max 10 same or different kinds remote.


4. Operating Instruction for Receiver :



5. Operating Instruction for Remote Control :


Sleep Mode:

the remote goes on a standby mode to save power when not in use for 30s. press any key to continue.

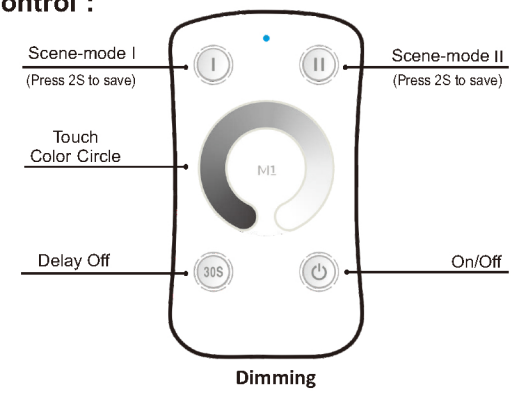


6. Wiring Diagram:

E.g. 1: Connected 12V lamp, loads 0~240W(12V).

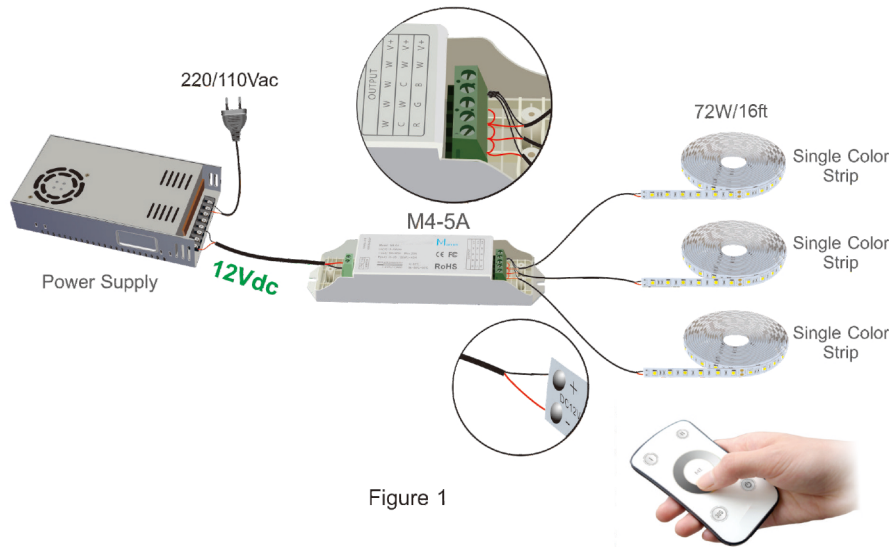

E.g. 2: Connected 24V lamp, loads 0~480W(24V).

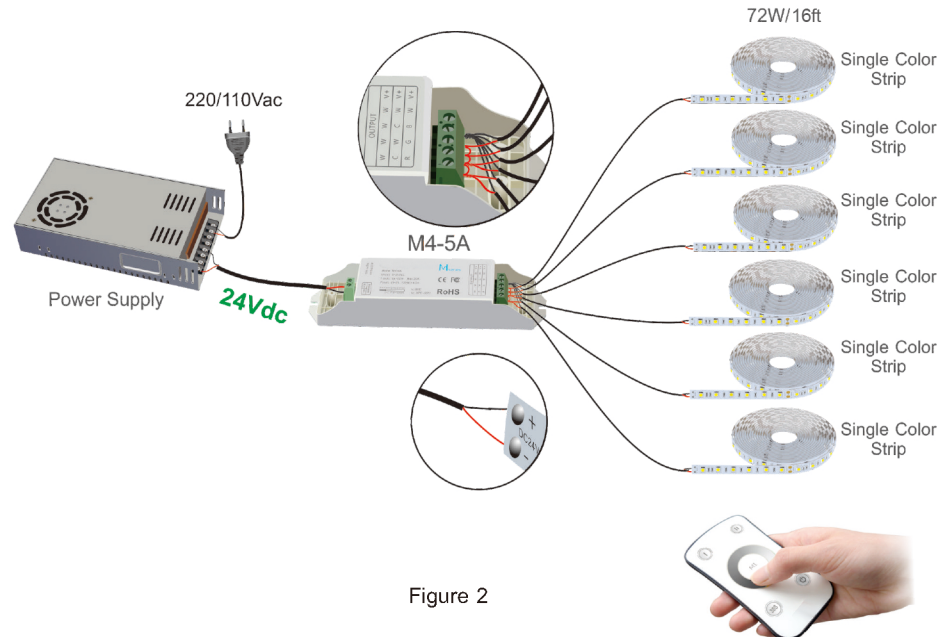

7. Attention:

- 7.1 The product shall be installed and serviced by a qualified person.
- 7.2 This product is non-waterproof. Please avoid the sun and rain. When installed outdoors please ensure it is mounted in a water proof enclosure.
- 7.3 Good heat dissipation will prolong the working life of the controller. Please ensure good ventilation.
- 7.4 Please check if the output voltage of any LED power supplies used comply with the working voltage of the product.
- 7.5 Please ensure that adequate sized cable is used from the controller to the LED lights to carry the current. Please also ensure that the cable is secured tightly in the connector.
- 7.6 Ensure all wire connections and polarities are correct before applying power to avoid any damages to the LED lights.
- 7.7 If a fault occurs please return the product to your supplier. Do not attempt to fix this product by yourself.